



Connector B

46															60														
46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1															15														

Connector A


5 6						73																82																94									
5	6	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	72	
3	3	4	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	50	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
1 2		7						16																28																							

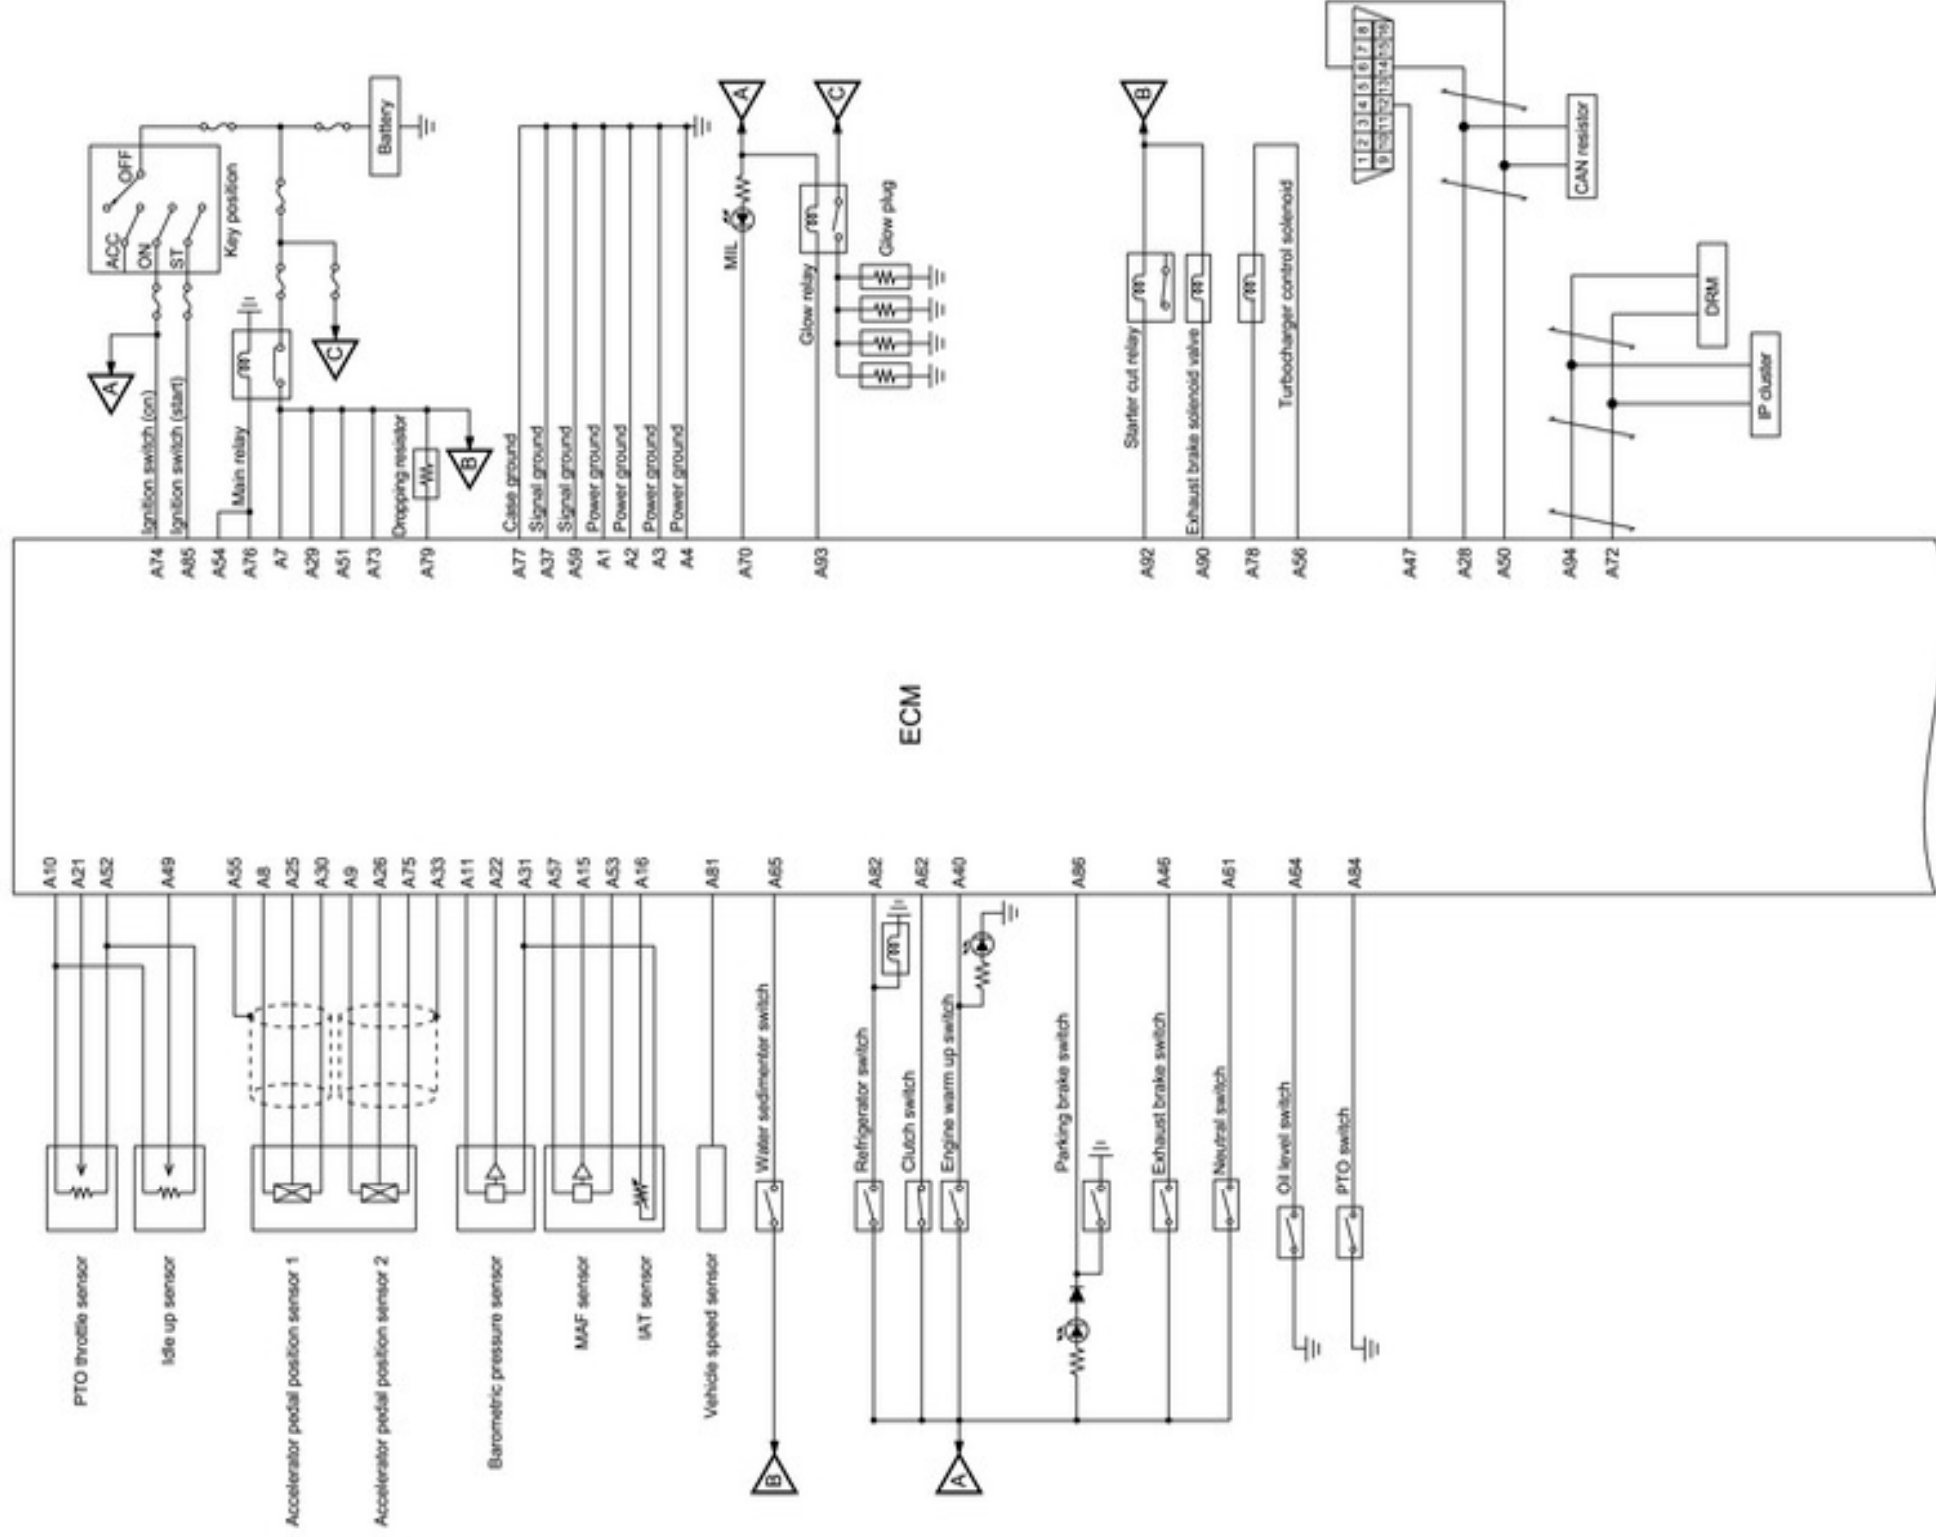

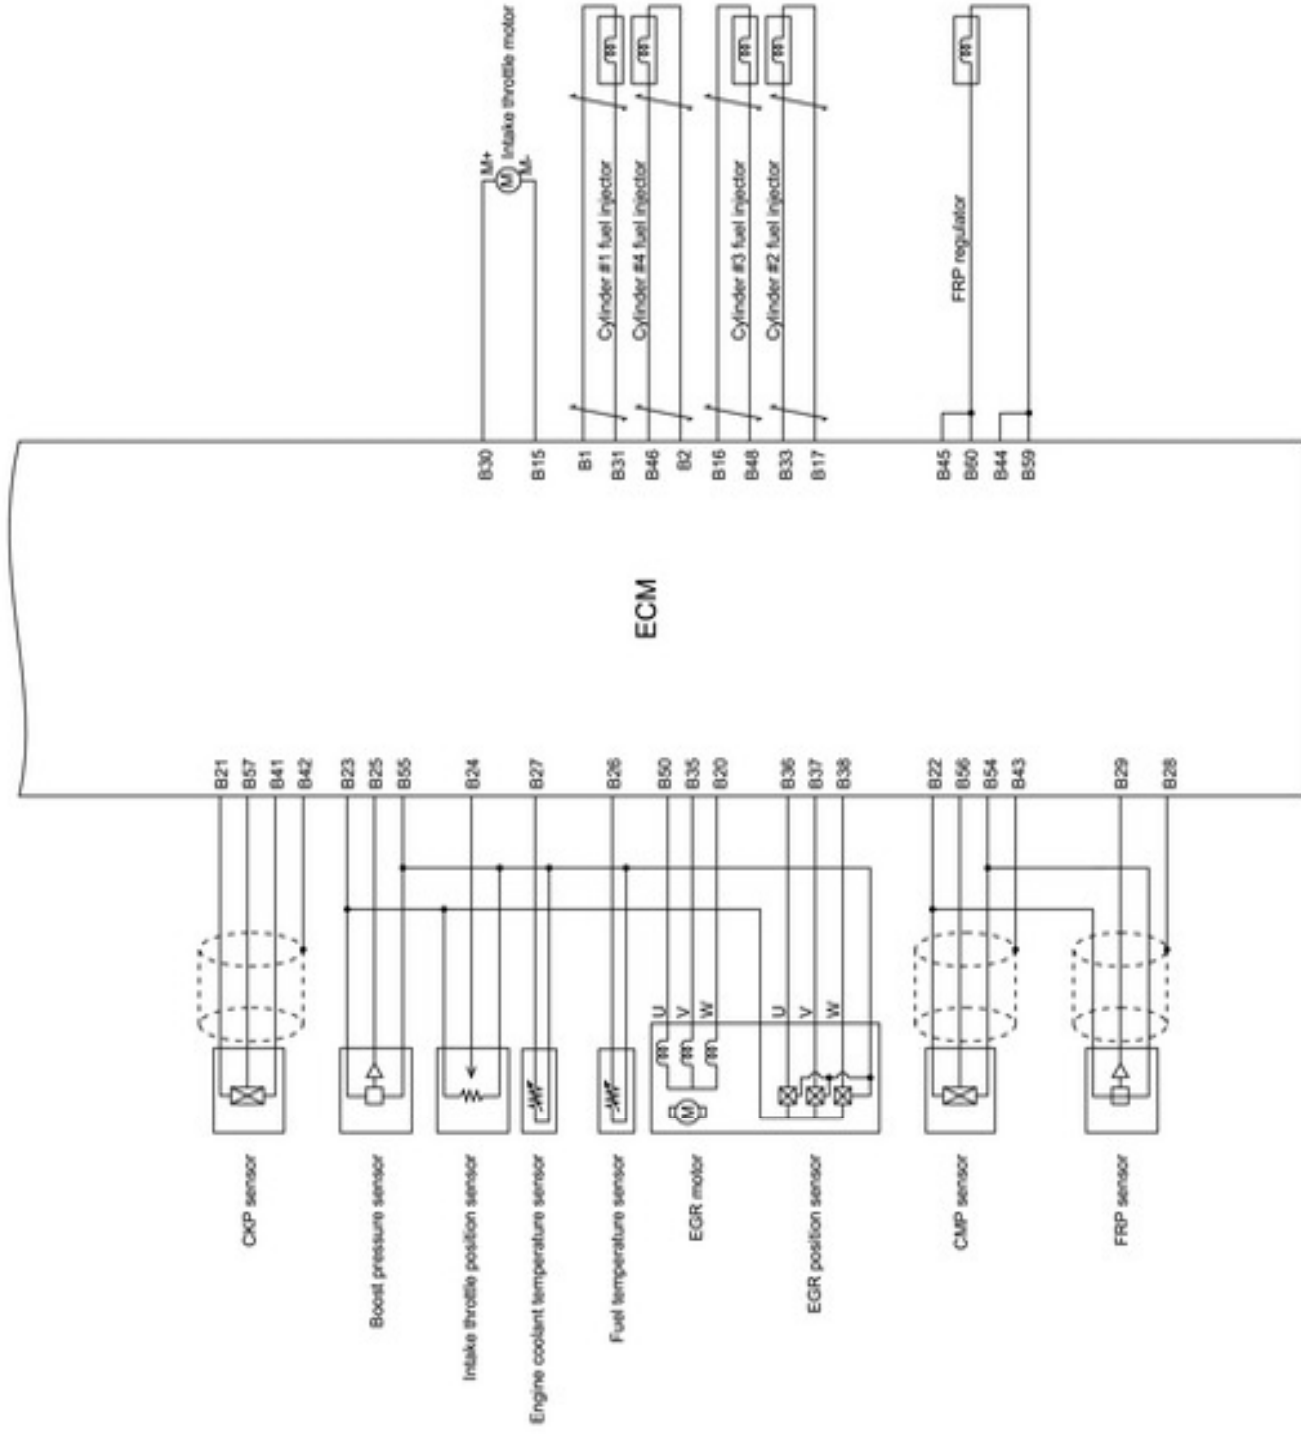


1	2	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
		29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
3	4																						
		51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72
5	6	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94


J170



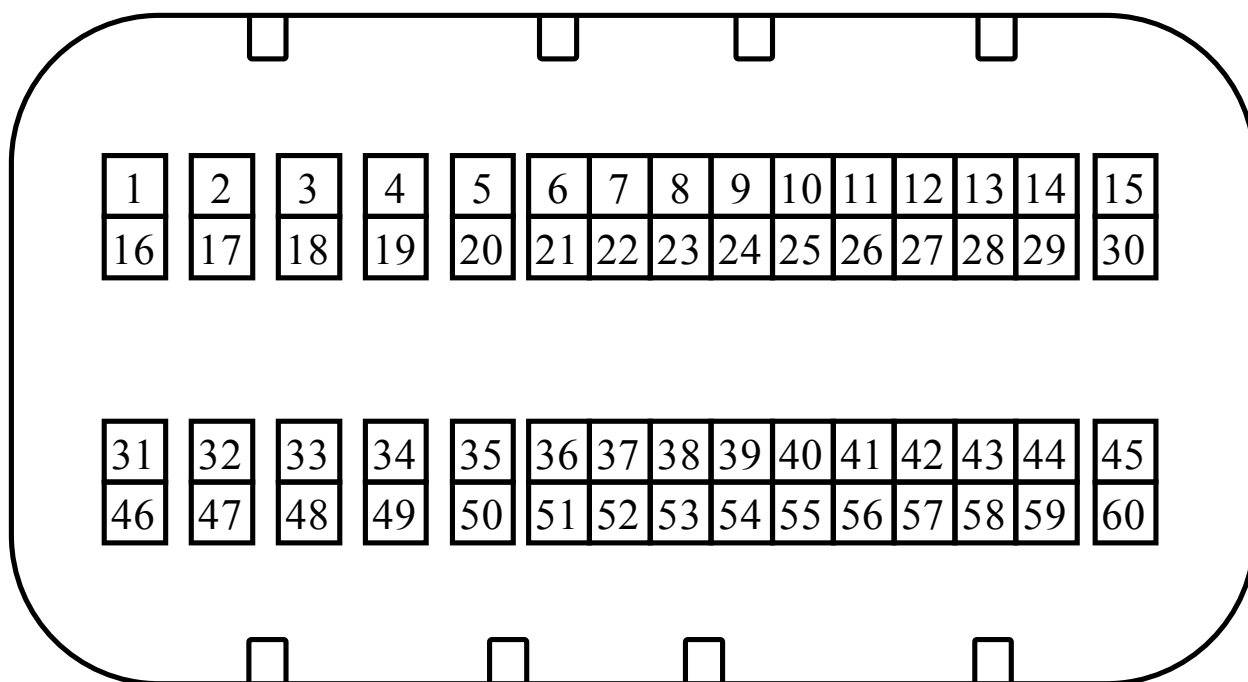


E166

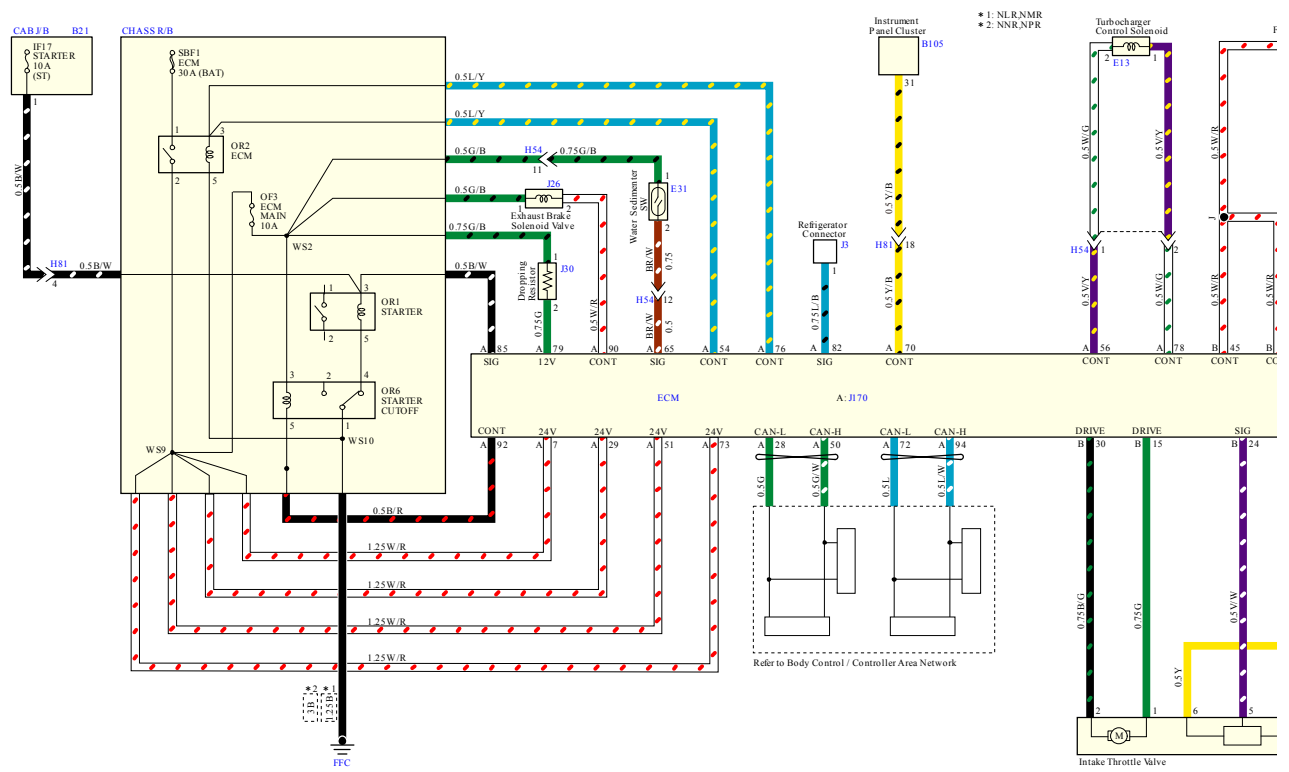

Diesel Hydraulic Brake 4HK1 4J11 LHD Engine Control(4J11) (Euro4 without DPD)

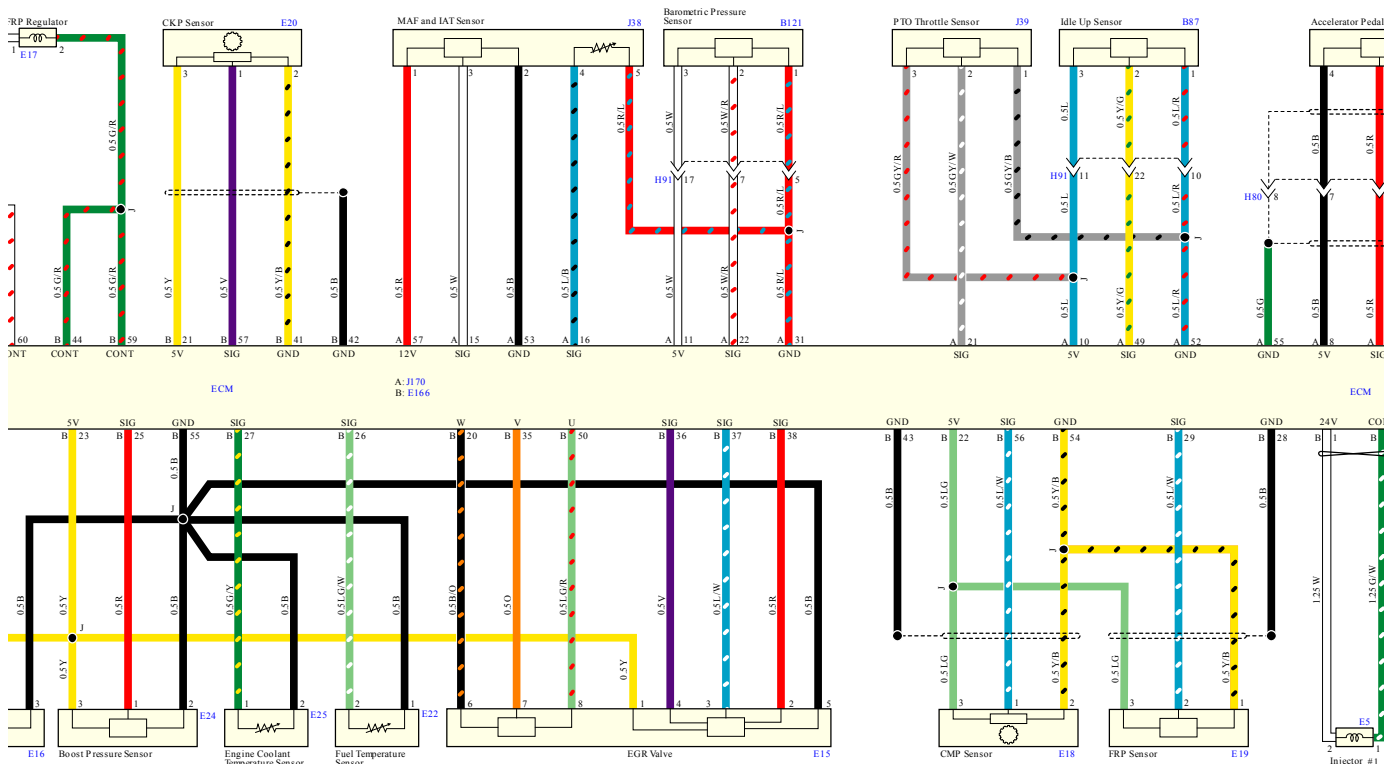

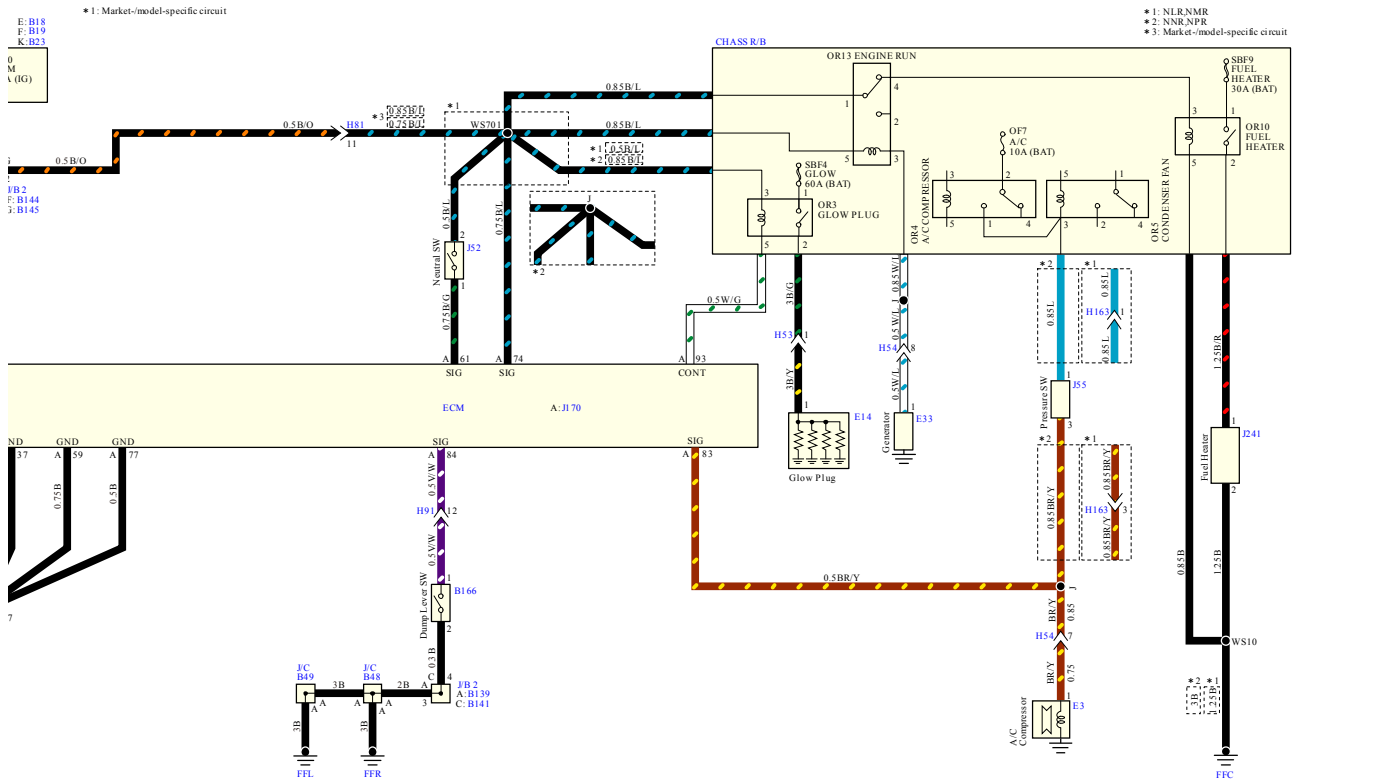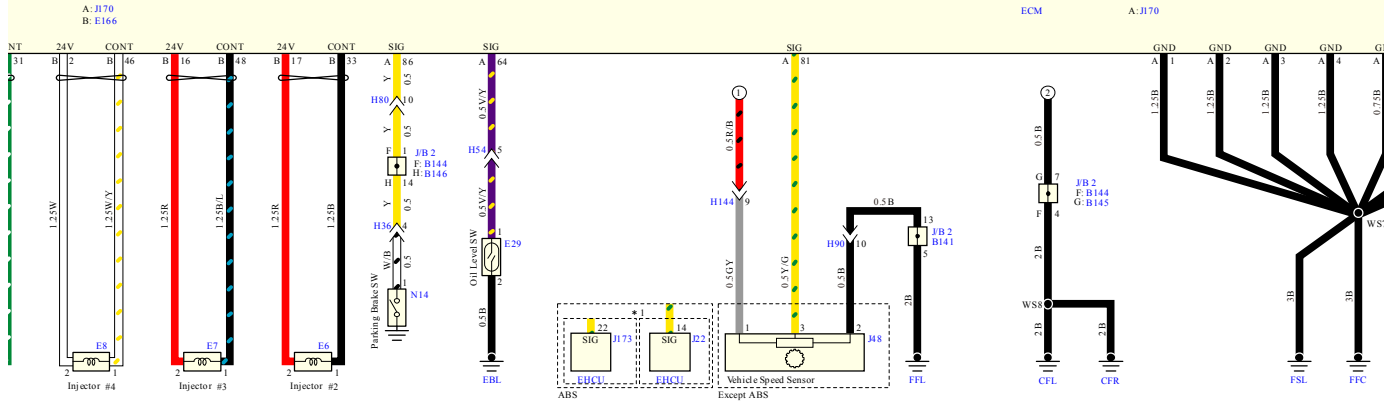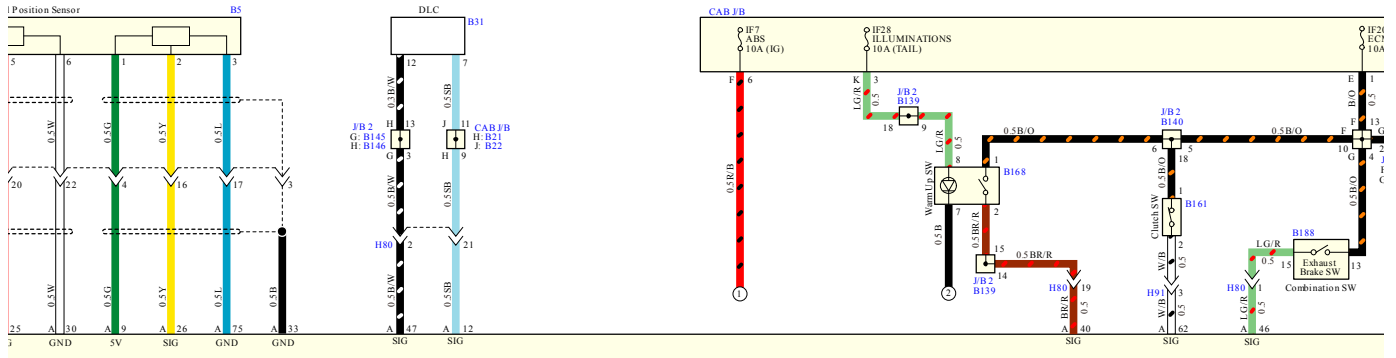

OR4: HVAC / Heater, Ventilator, Air Conditioner / Manual Air Conditioner
 OR5: HVAC / Heater, Ventilator, Air Conditioner / Manual Air Conditioner